
S661


Installation Instructions

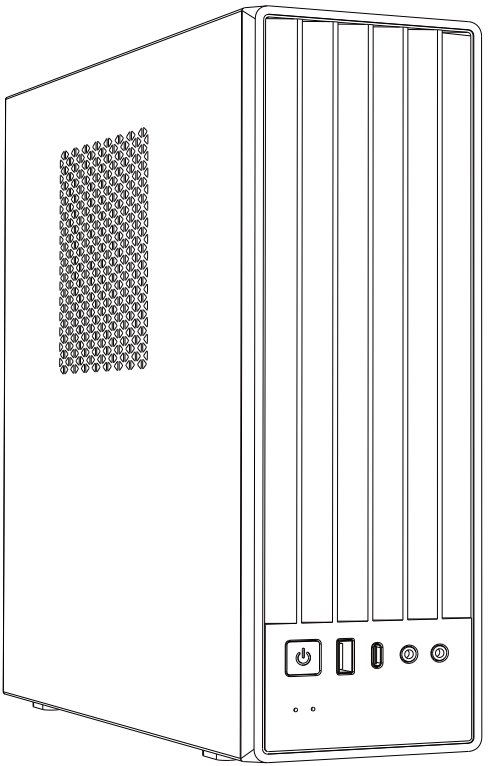

Hardware List


Hardwareliste / Lista de hardware / Список оборудования / 零件清单

a

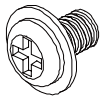


meson screw X 2

b

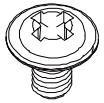


CD drive screw X 9

c




countersunk screw X 2

d

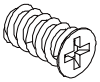


fan screw X 2

e




hard drive screws X 2

f

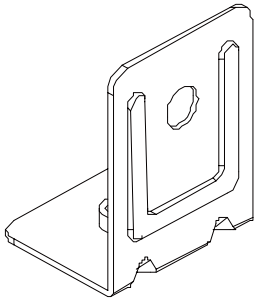


Power bracket X 2


1. S661 I/O panel.

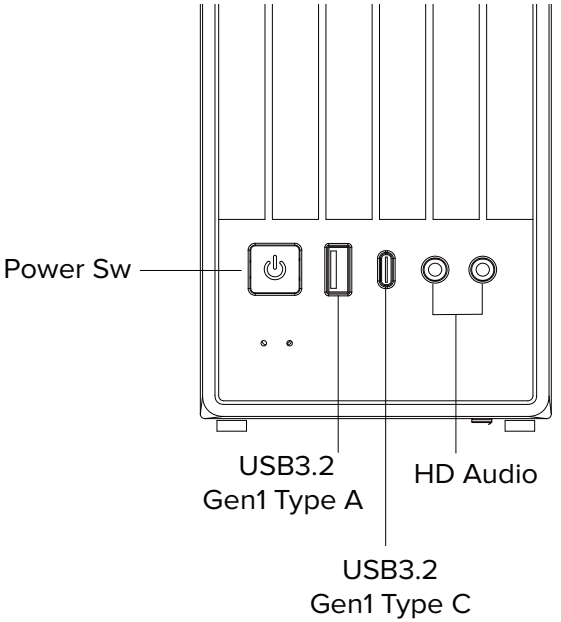


2. Unscrew the stud screw and take off the side panel.

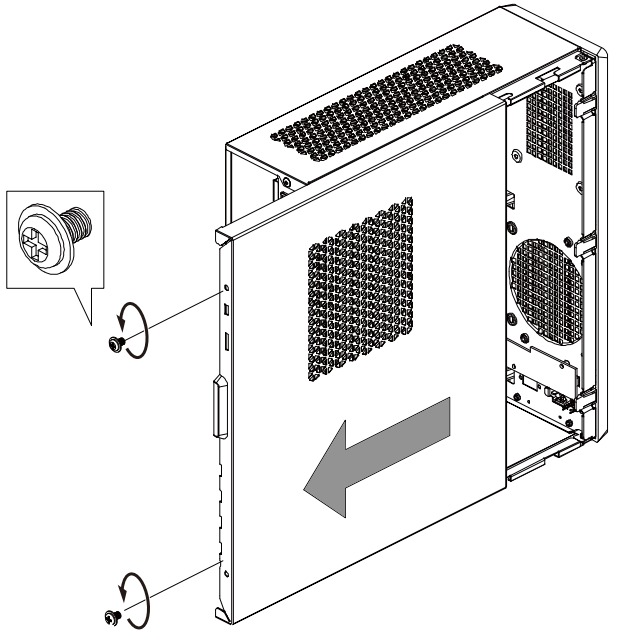


3.Install the I/O shield.

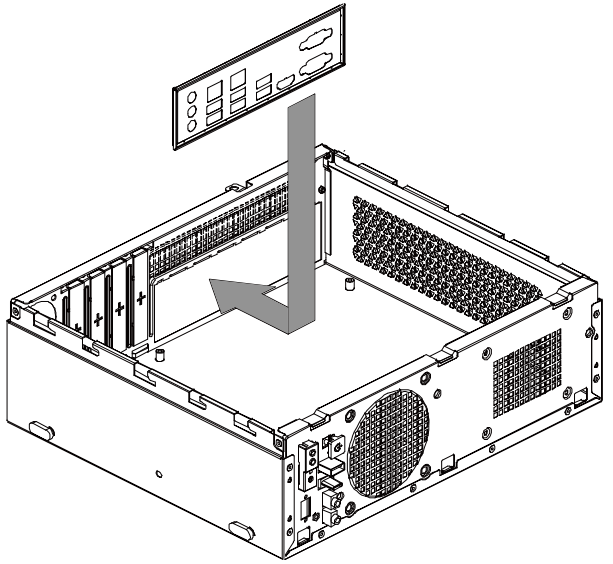


4. Install the motherboard, the cooler supports up to 75mm.

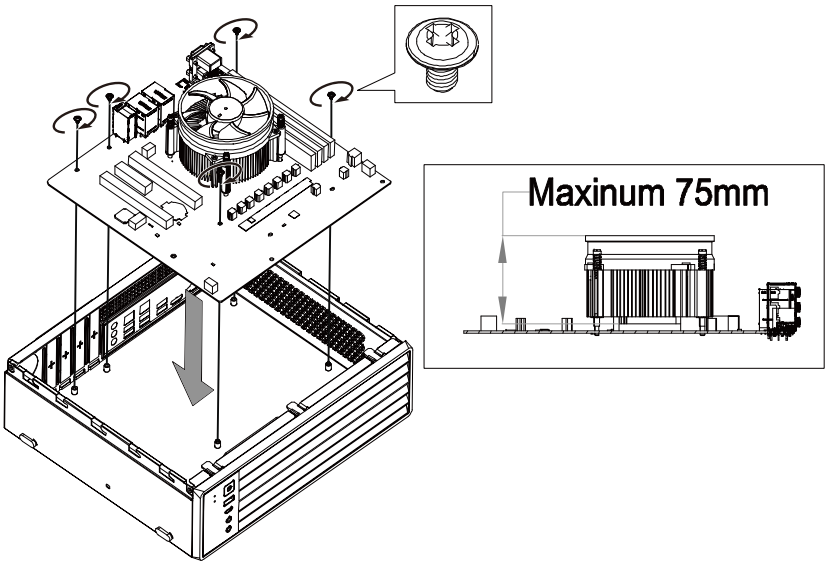

5.Install the power bracket/power supply.

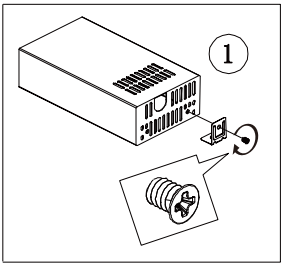

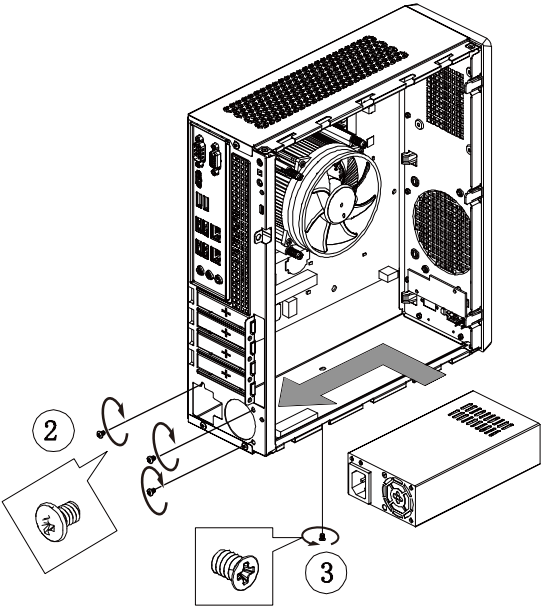


(1) Install the power bracket using countersunk screws.


(2) Use hard drive screws to mount the power supply and secure it to the back of the case.

(3) Use countersunk screws to secure the power supply bracket.


6. Remove the panel.

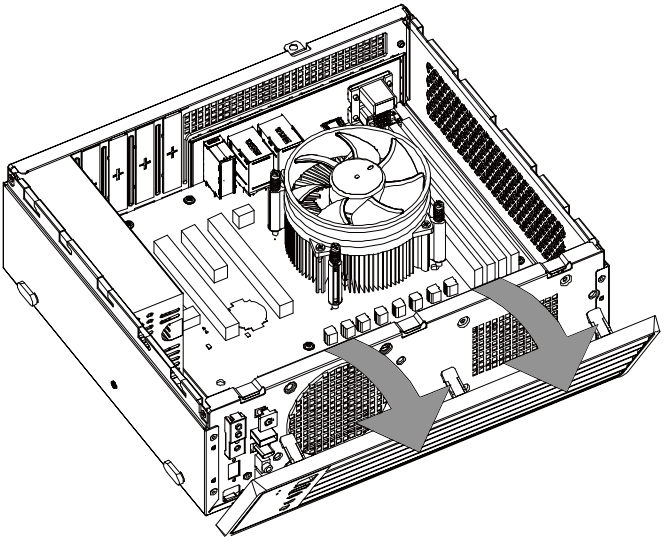


7.Install a fan.

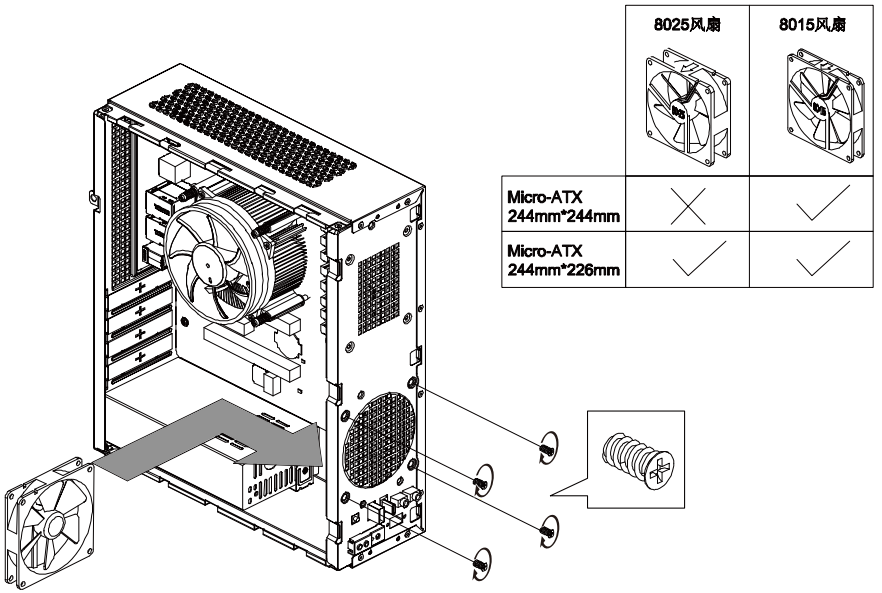


8.Install an SSD.

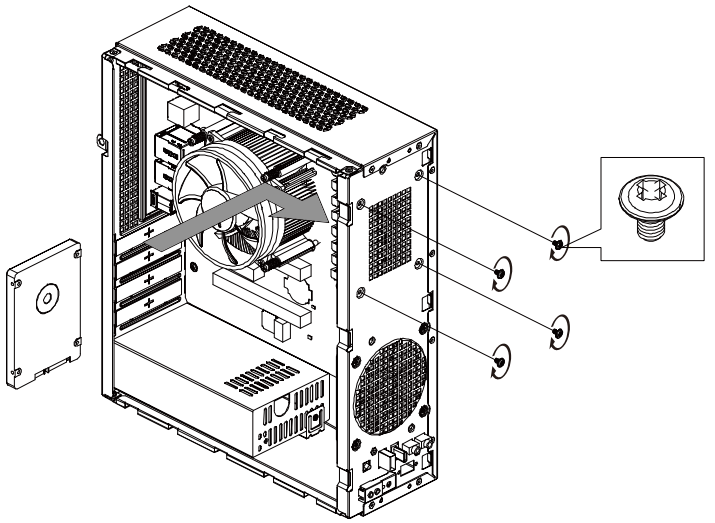


9.Install panel.

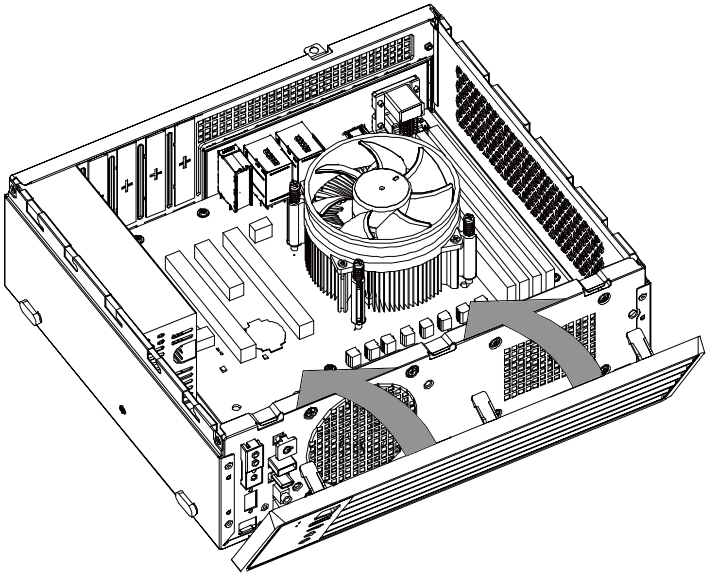

10.Remove the PCI bracket

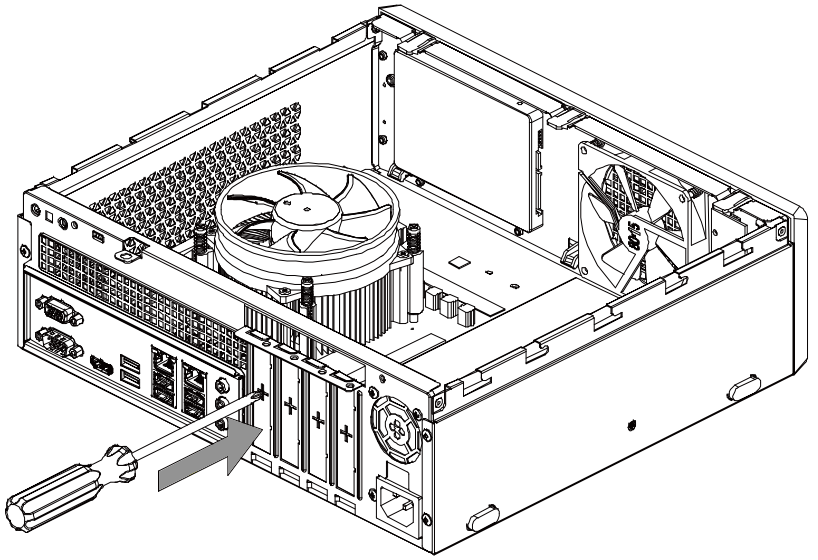

11.Install the graphics card(GPU Length Up to 245mm).

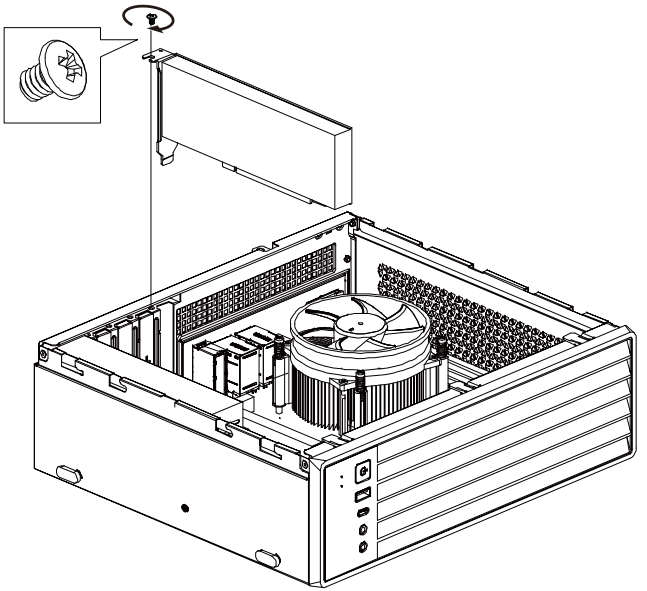

12.Install the side panel.

